

Infiniti G35 Voice Recognition Cheat Sheet

Music Box		Help	
Music Box Play	Turns on the "Music Box" hard-disk drive audio system.	Help	Displays the command list.
Play by Mood	Plays the specified song matching your mood.		
Relaxing Music	Plays the specified relaxing music.	Phone	
Lively Music	Plays the specified lively music.	Phone Redial	Redials the phone number last dialed.
Slow Music	Plays the specified slow music.	Phone Dial	Dials the phone number given in the command.
Upbeat Music	Plays the specified upbeat music.	Phone Dial <Phone Number>	Dials the phone number given in the command.
Play by Category	Plays the specified song in the specified Category.	Phonebook	Shows the first page of the "Phonebook" list.
My Favorites	Plays your favorite song.	Phonebook <Voicetag>	Dials the phone number registered in the specified "voicetag".
Rarely Played	Plays a rarely played song.	Outgoing Calls	Shows the outgoing call history (1 to 5).
Hit Songs	Plays the specified hit song.	Incoming Calls	Shows the incoming call history (1 to 5).
Kid's Songs	Plays the specified songs for children.	Phone Select	Selects another cellular phone registered in system.
Music Box Off	Turn the "Music Box" off.	Play Phonebook	Outputs the "Voicetags" registered in the system.
Radio		Climate Control	
Radio Play	Turn the radio on, selecting the station and band last played.	Climate Control	Turns the climate control system on and operates it in AUTO mode.
Radio AM	Turns to the AM band, selecting the station last played.	Climate Control OFF	Turns the climate control system off.
Radio FM	Turns to the FM band, selecting the station last played.	Temperature <60 - 90>	Sets the climate control temperature to the specified value.
Tune <87.7 - 107.9>	Tunes to the specified FM frequency.	Driver Temperature <60 - 90>	Sets the driver's side temperature to the specified value.
Tune <530 - 1710>	Tunes to the specified AM frequency.	Passenger Temperature <60 - 90>	Sets the passenger's side temperature to the specified value.
Preset <A - C> <1 - 6>	Switches directly to the specified preset station in the specified preset bank.		
Preset <A - C>	Switches directly to the specified preset station in the specified preset bank.	Destination	
Preset <1 - 6>	Switches directly to the specified preset bank.	Destination Home	Sets a route to your home that is stored in the Address Book.
Radio OFF	Turns the radio off.	Destination Address Book	Sets a route to a location stored in the Address Book.
Radio Menu	Displays the radio menu.	Destination <Voicetag>	Sets a route to a stored location that has the voicetag specified.
		Destination Nearby <POI Category>	Sets a route to the POI category near the current vehicle location.
		Destination Nearby Places	Sets a route to a facility near the current vehicle location.
		Destination Previous Destinations	Sets a route to a previous destination.
		Destination Previous Start Point	Sets a route to a previous start point.
Satellite			
Satellite Radio	Turns the SAT radio on selecting the station and band last played.	Search	
Satellite Radio Channel <1-255>	Tunes to the specified SAT frequency.	Destination Street Address	Searches for a location by the street address specified and sets a route.
Preset <A - C> <1 - 6>	Switches directly to the specified preset station in the specified preset bank.	Destination Street Address <State>	Searches for a destination in the state specified and sets a route.
Preset <A - C>	Switches directly to the specified preset station in the specified preset bank.	Destination Street Address Last State	Searches for a destination in the state previously specified and sets route.
Preset <1 - 6>	Switches directly to the specified preset bank.	Destination Street Address Last City	Searches for a destination in the city previously specified and sets route.
Radio OFF	Turns the radio off.	Destination Phone Number	Searches for a destination by the phone number specified and sets route.
Radio Menu	Displays the radio menu.	Show Nearby <POI Category>	Searches for a POI near the current vehicle location and sets route.
CD			
CD Play	Starts to play a CD.	Map	
Track <1 - 512>	Switches to the specified track.	Show Current Location	Displays the current location map screen.
Folder <1 - 255>	Selects the specified MP3 folder and plays the first file.	Landmark Icons	Displays all the landmark icons.
Folder <1 - 255> Track <1 - 512>	Switches to the specified track on the specified MP3 folder.	Landmark Icons <POI Category>	Displays the landmark icons of the specified POIs.
CD OFF	Stops the CD playback.	Planview Map	Displays the map in Plan View.
CD Text	Displays the information about the track currently being played.	Birdview Map	Displays the map in Birdview.
CD Menu	Displays the CD Menu.	Planview Split Map	Displays the map in Split (Plan View).
		Birdview Split Map	Displays the map in Split (BirdView).
CD Changer		North Up	Sets the orientation of the map to North Up.
CD Changer Play	Starts to play the CD Changer.	Heading Up	Sets the orientation of the map to Heading Up.
Disk <1 - 6>	Switches to the specified CD and plays the first file.	Zoom In	Zooms the map in.
Track <1 - 99>	Switches to the specified track.	Zoom Out	Zooms the map out.
Disk <1 - 6> Track <1 - 99>	Switches to the specified track in the specified CD.	<1, 2, 5, 8, 32, 400> miles Scale	Displays the map in the specified scale (1, 2, 5, 8, 32, or 400 miles).
CD OFF	Stops the CD playback.	<1/8, 1/4, 1/2> miles Scale	Displays the map in the specified scale (1/8, 1/4 or 1/2 mile).
CD Menu	Displays the CD Menu.	<150, 300> feet Scale	Displays the map in the specified scale (150 or 300 feet).
		<75, 150> feet Building Scale	Displays the map in the specified scale (75 or 150 feet).
Audio			
Audio Play	Turns the audio system on.	Route	
Audio OFF	Turns the audio system off.	Fastest Route	Sets the route search condition to Fastest Route.
		Minimize Freeway	Sets the route search condition to Minimize Freeway.
CF		Shortest Route	Sets the route search condition to Shortest Route.
Compact Flash Play	Starts to play the files saved in the CompactFlash card.	Cancel Route	Cancels the route setting.
Track <1 - 512>	Switches to the specified track.	Detour	Calculates a detour.
Folder <1 - 255>	Selects the specified folder in the CompactFlash card and plays the first file.	Route Information	Displays the route information.
Folder <1 - 255> Track <1 - 512>	Switches to the specified track in the specified folder in the CompactFlash card.	Recalculate	Recalculates a route.
Compact Flash OFF	Stops the playback of the CompactFlash card.		
Compact Flash Text	Displays the information about the file currently being played.	Others	
Compact Flash Menu	Displays the CompactFlash menu.	Traffic Info.	Turns on/off the traffic information system.
		Guidance Voice	Turns on voice guidance.
Vehicle		Store Location	Stores a current location.
Fuel Economy	Displays the Fuel Economy screen.	Guidance Voice Repeat	Repeats voice guidance once.
Maintenance	Displays the Maintenance screen.	Play Address Book	Speaks voicetags stored in the Address Book.
Status	Displays the Status screen.		